



2022+ Honda Civic QuickLIFT Installation Guide

Step 1 - Unpack QuickLIFT System and verify contents.

Remove all items from the packing tube. You should have the following before beginning:

- * (2) Gas-springs
- * (2) Lower mounting brackets
- * (2) Hood insert Assemblies
- * Printed Instructions

RT-QL-200-3A
32-00034
55-00011



(2) 55-00011



(2) 32-00034



72-00002 or
72-00003


72-00004

Step 2 - Gather the required tools.

- * 1/2" deep well socket
- * 14mm socket
- * Socket wrench
- * Trim removal tool
- * Knife


Step 3 - Mount lower brackets

- A. Remove shock tower nut (outer) using 14mm socket.
- B. Place (34) bracket over stud, ball stud aiming inward toward center of shock tower.
- C. Repeat for the passenger side of vehicle, be sure ball-stud is facing toward center of shock tower on both sides.

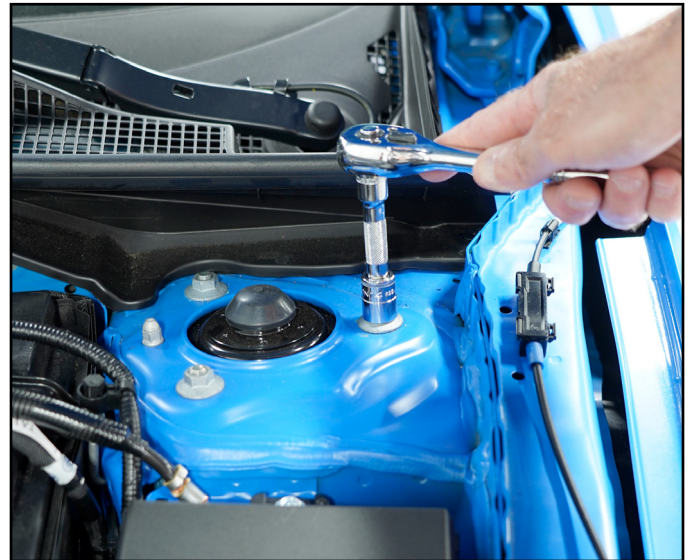


Step 4 - Locate two lower corner push pins

A. Locate lower push pins and remove using a trim removal tool.

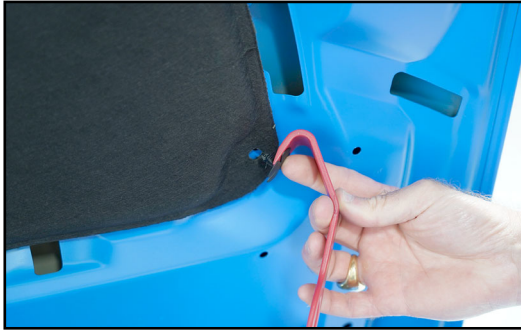

Step 5 - Install Hood insert assemblies

A. Pull back the hood liner on the driver's side to reveal slots shown to the below. Highlighted slot will be used for ball stud.

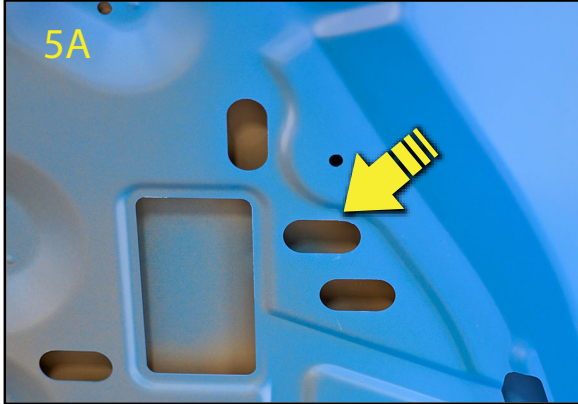

B. Loosen silver nut leaving at least 3 threads engaged in nut. Slip into slot shown with silver nut aligned vertically to grip hood.



C. Silver nut shown gripping hood slot on top and bottom, aligned vertically.



D. Tighten using 1/2" deep-well socket. Center in slot




Step 6 - Create slot for ball stud


A. Put liner back into position. Locate ball-stud from front of liner. Mark this location.



B. Make a small incision at stud location. Cut two directions - X marks the spot.

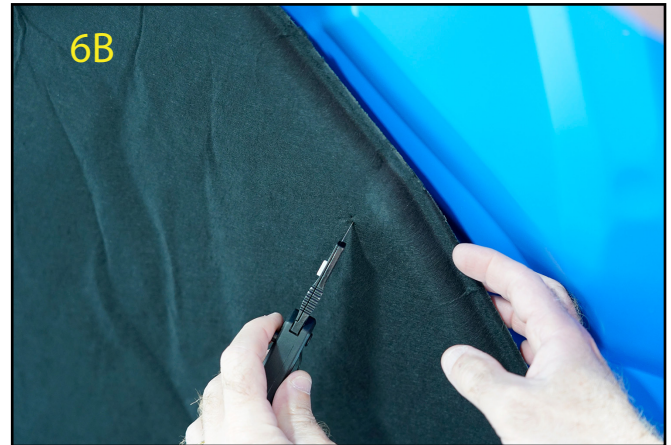

C. Make second diagonally across the first

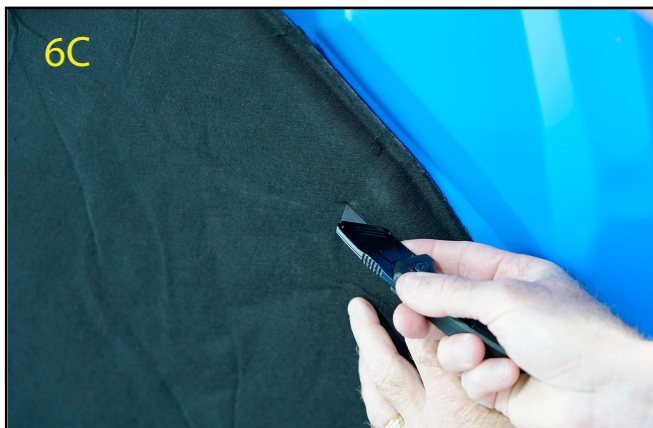

D. Push the stud through the cut location.



E. Repeat on the passenger side of vehicle.

F. Replace both push pins.



Step 7 - Carefully install gas springs

A. The gas springs install with the large housing attached to the top or hood ball-stud. The strut extension attaches to the lower ball-stud.

NOTE: Carefully rock the gas spring socket over the ball-stud with light pressure from the back side. This allows the c-clip inside the end-fitting to spread and wrap around the ball-stud. If you just force them on, you will bend the c-clip inward and will need to purchase another end-fitting from us.

