



QuickLIFT Carbon (Shelby GT500) (Single gas strut with 2 caps)

Remove gas strut from vehicle:




Step 1A
Slide a small flat blade screw driver under the




Step 1B
Lift and rotate C-clip toward end as shown.



Step 1C
Lift gas strut from ball-stud

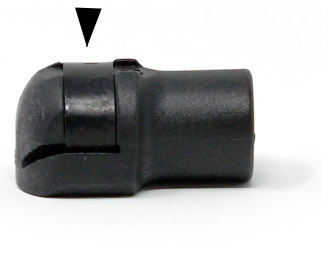

Step 1D
Properly seat C-clip into original position (both ends of strut)

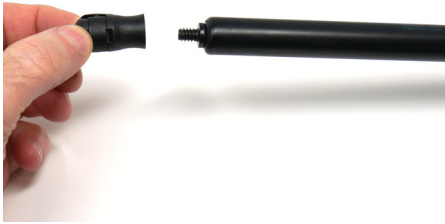

Step 2
Remove both end-fittings from strut (both tube & extending rod)



Step 3
Slide carbon sleeve over strut from the rod end & secure rubber caps to both ends of tube.



Step 4
Tighten end-fittings onto both ends of gas strut

Step 5
Snap gas strut back onto vehicle.

